

## Presentation Unit Quick Reference Guide

**Video selections (Channels) – Video Selector is on the bottom of the cart, on the left side.**




**\*You can also use the Keypad on top of the cart to change the video selection:**



- 1 = Laptop
- 2 = Document Camera
- 3 = DVD or VHS \*You will need to select DVD or VHS on the DVD/VHS player.
- 4 = Not Used or Blank Screen

Document Camera	DVD/VHS Player
	

## Laptop

The laptop is provided by YOU. Hook up the VGA cable to the VGA output port on your laptop. Then hook up the 1/4" jack to the 1/4" jack with the headphones  icon on your laptop.

